




LEVEL.IT

ADJUSTABLE DECK SUPPORTS

BISON DECK SUPPORTS
 1975 W. 13TH AVE.
 DENVER, COLORADO 80204
 TOLL FREE: 1-800-333-4234
 PHONE: (303) 892-0400
 FAX: (303) 825-5988
 Sales@BisonDeckSupports.com
 www.BisonDeckSupports.com

"T" METHOD: DETERMINE CAVITY HEIGHT AT ALL THRESHOLDS, DRAINS AND HIGH POINTS. DEDUCT THE THICKNESS OF THE DECKING MATERIAL FROM THE MEASURED DISTANCE BETWEEN THE TOP OF THE MEMBRANE TO THE TOP OF THE DECKING MATERIAL TO DETERMINE THE PEDESTAL HEIGHT AND MODELS NEEDED FOR EACH LOCATION. USE A "LASER LEVEL" TO MARK THE TOP OF PEDESTAL ELEVATION AROUND THE DECK. PLAN PAVER/PEDESTAL LAYOUT PATTERN BEFORE STARTING, BY MARKING GUIDELINES ON THE ROOF IF NEEDED. USING THE GUIDELINES INSTALL A "T" SHAPED PORTION OF THE NEW DECK STARTING FROM THE THRESHOLD (OR HIGH POINT). DECKING ON BOTH ROWS OF THE "T" SHOULD BE ADJUSTED TO THE CORRECT HEIGHT AND LEVELED BEFORE PROCEEDING. INSTALLATION ON BOTH SIDES OF THE "T" CAN THEN PROCEED AT THE SAME TIME.

ACRONYM	MEANING
LP	LOW POINT OF ROOF
HP	HIGH POINT OF ROOF

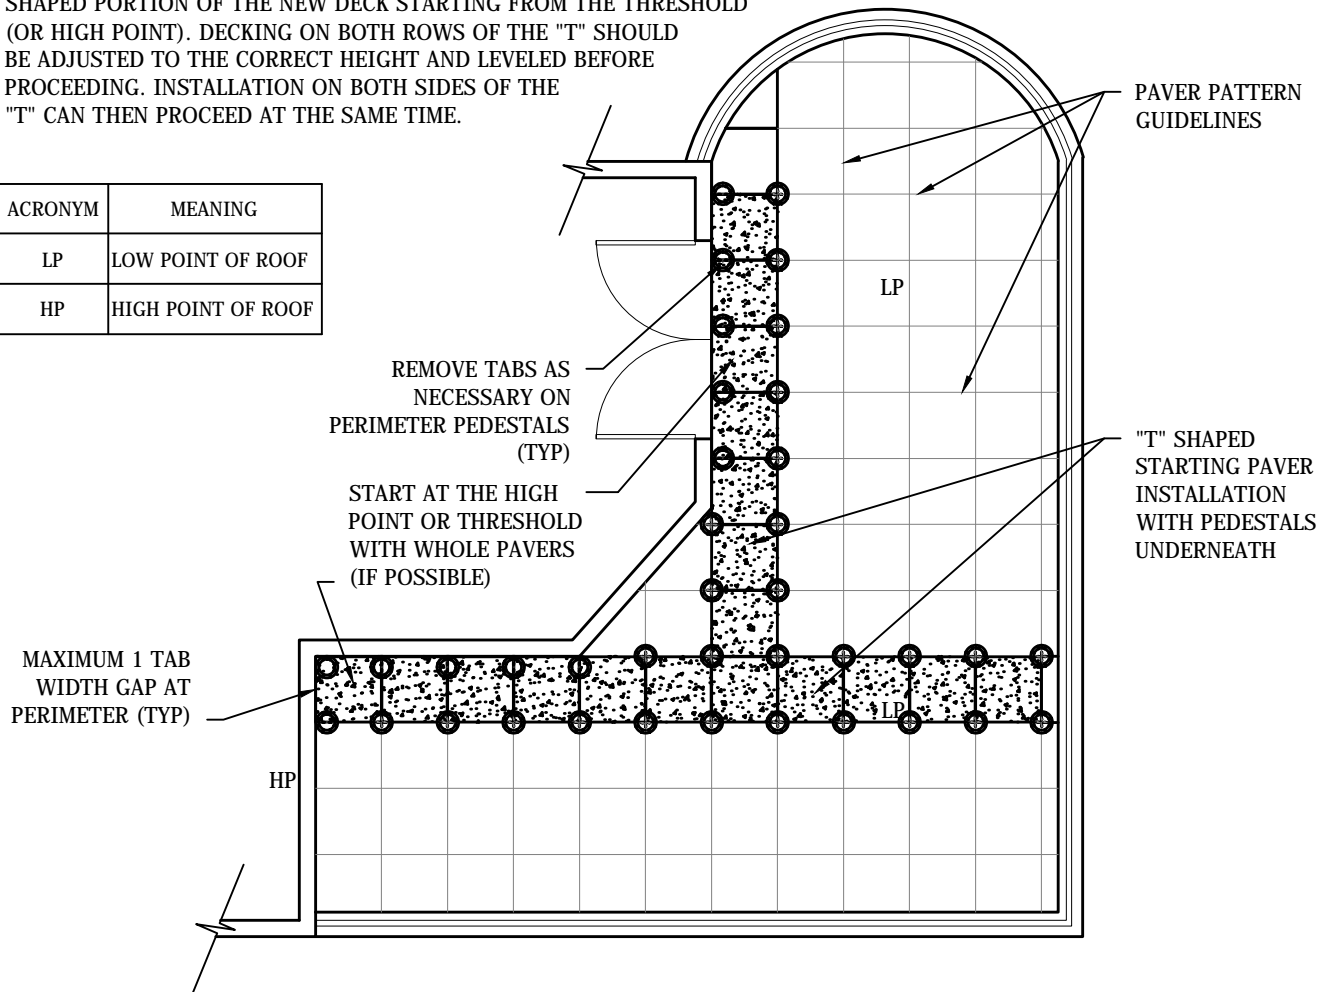

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DRAWINGS NOT TO SCALE.
3. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.BisonDeckSupports.com REFERENCE L-041.

2 SAMPLE DECK STARTING INSTALLATION

USING "T" INSTALLATION METHOD