




LEVEL.IT

ADJUSTABLE DECK SUPPORTS


BISON DECK SUPPORTS
1975 W. 13TH AVE.
DENVER, COLORADO 80204
TOLL FREE: 1-800-333-4234
PHONE: (303) 892-0400
FAX: (303) 825-5988
Sales@BisonDeckSupports.com
www.BisonDeckSupports.com

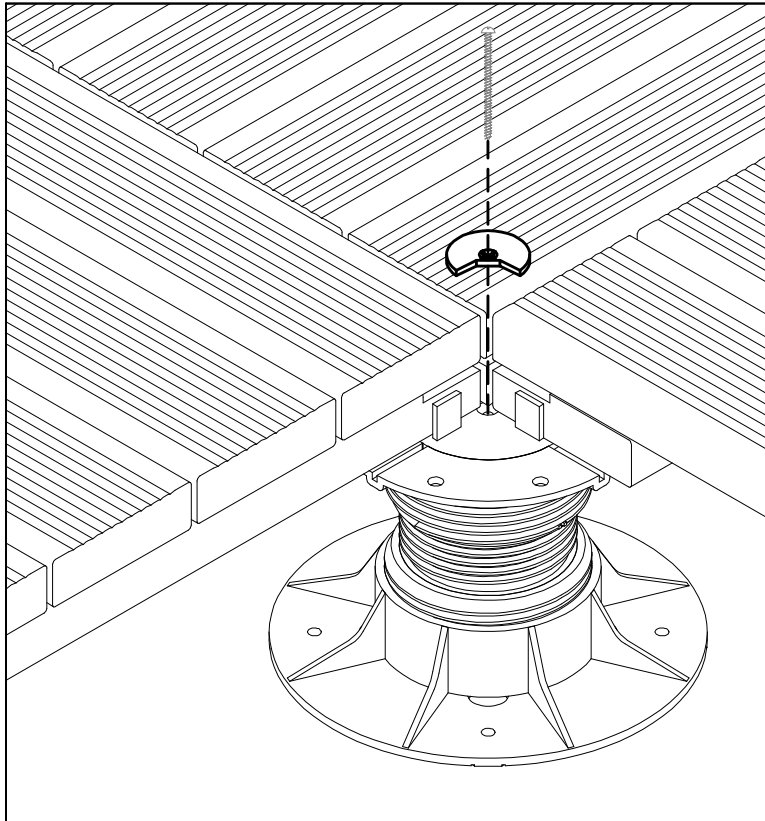

PLACE THE FS1 WASHER IN THE KERF CUTS BETWEEN THE BOTTOM RAIL AND THE UPPER SLAT IN THE CORNERS OF THE THREE TILES. LEAVE THE NOTCH IN THE WASHER FACING OUTWARDS IN ORDER TO LEAVE ROOM TO PLACE THE 4th TILE. AFTER ALL TILES ARE TIGHTLY IN PLACE, ROTATE THE WASHER USING A SCREWDRIVER SO THAT THE SOLID PART OF THE WASHER IS IN CONTACT WITH THE CORNERS OF ALL FOUR TILES. INSERT THE FS1 SCREW THROUGH THE HOLE IN THE CENTER OF THE WASHER AND THE PILOT HOLE IN THE CENTER OF THE TAB SET INTO THE TOP OF THE PEDESTAL. HAND TIGHTEN UNTIL THE CORNERS OF ALL FOUR TILES ARE SECURELY FASTENED TO THE PEDESTAL.

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DRAWINGS NOT TO SCALE.
3. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.BisonDeckSupports.com REFERENCE-NUMBER



FS1 FASTENING KIT DETAIL

USING AN FS1 WITH IPE WOOD TILES